



## FLASHING DETAILS




DRAWN BY: ECM C&C-FLOLINE-002A DWG NO: DATE: 030811



(1)


NOTE: ADD 1/4" TO MATERIAL

NOTE: ADD 1 3/8" TO MATERIAL

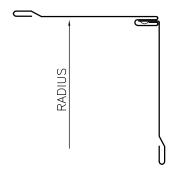


SNAP LOCK RECEIVER


(3)





TYPICAL PROFILE

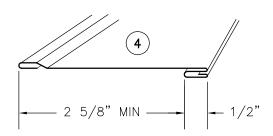

SNAP LOCK FLANGE

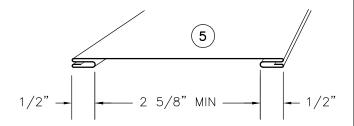

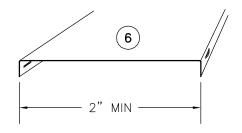

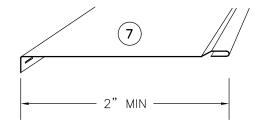

## GENERAL NOTES:

- CURVED HEM CAN BE USED ON ANY EDGE REQUIRING A HEM
- SNAP LOCK RECEIVER IS USED ON THE CURVED PIECE
- SNAP LOCK FLANGE IS USED ON THE CUT PLATE PIECE

SENT TO PRODUCTION